


Configuring Inverter Communication

You may need to reconfigure your inverter communication in certain cases, such as when your Wi-Fi network or password has changed.

To configure your inverter communication:

1

Click "**Inverter Communication**" in the menu.

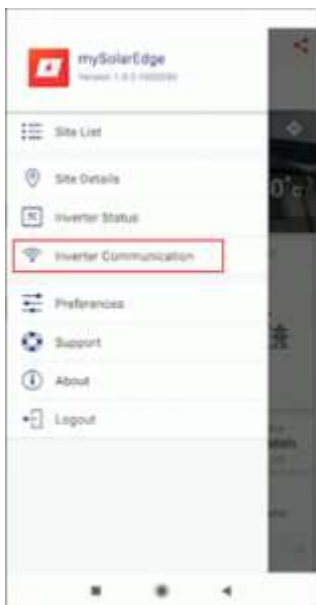

2

Scan the QR code on your inverter.

3

The status of your Wi-Fi connection should be 'disconnected'. To connect to your Wi-Fi network, click "configure."



4

Select your preferred wireless network and insert a password, then click "join."

You will now be connected to your Wi-Fi network. To confirm the connection is successful, click on *Inverter Communication* in the menu. Connect to the inverter and verify the status as S_OK.

